

# EARTH FAULT INDICATOR

# ELU96


## Indicator of Phase with Earth Fault

### FEATURES

The ELU96 is designed for use in conjunction with either KPM161 or MPI161.

Normally the three LED's will be at full brilliance. When an earth fault is indicated on the KPM161 or MPI161, the test button is operated and the phase with the fault is identified by a dim LED.

The ELU96 can be used on systems up to 440V AC.

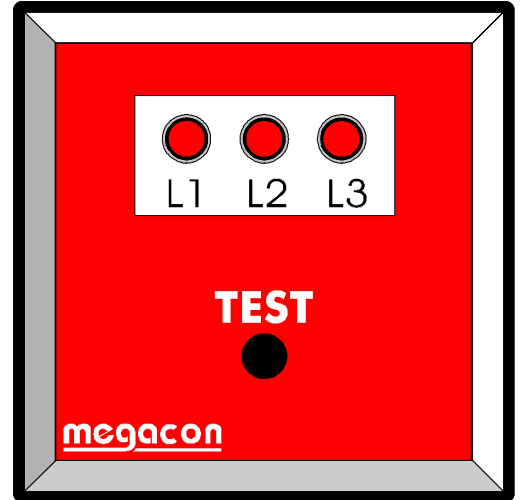

MEGACON AS

Norway

Tel : +47 55 54 68 00  
Fax : +47 55 54 68 10

MEGACON INTERNATIONAL


Norway

+47 55 54 68 22  
e-mail: megacon@megacon.no

MEGACON GENERATORTEKNIK ApS

Denmark

Tel : +45 42 84 45 14  
Fax : +45 42 84 45 94

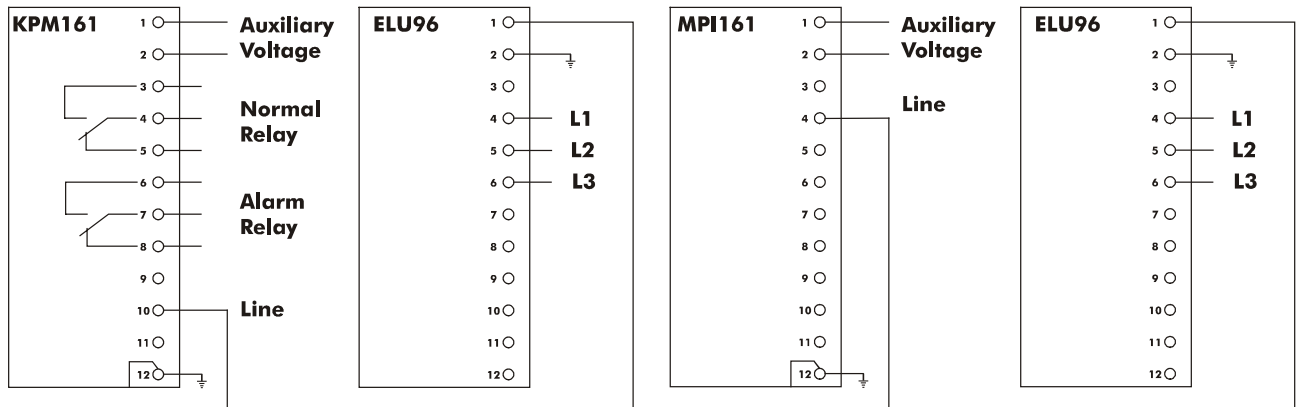

### ORDERING INFORMATION

Monitored voltage. :

The MEGACON policy is one of continuous improvement, consequently equipment supplied may vary in detail from this publication



MEGACON CONTROLS LTD  
Unit 21, Oldends Lane Industrial Estate  
Stonehouse  
Glos., GL10 3RQ  
United Kingdom

Tel : +44 1453 824471 Fax : +44 1453 825234  
E-mail: Sales@megacon.co.uk



**megacon**  
ELECTRONIC CONTROL AND INSTRUMENTATION

A Megacon International Publication

REF: Page 3.070-F-0899